



KNOCK DOWN STRAINER ASSEMBLY INSTRUCTIONS


1.

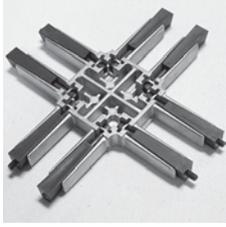


INSTALL WEDGES TO SPIDER

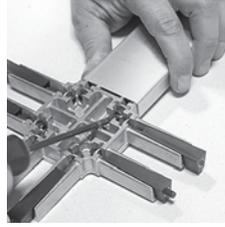

INSERT SPIDER INTO BRACE AND TIGHTEN USING THE PROVIDED 4MM BALL HEX SCREWDRIVER

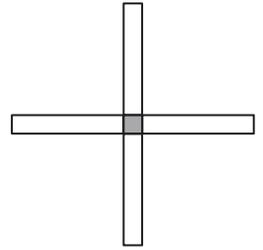

2.

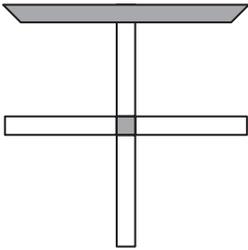


INSERT TOP BRACE TO TOP PERIMETER.




INSERT BRACE

3.

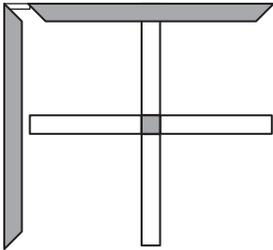


INSTALL CORNER SUPPORT AND JOIN THE TOP PERIMETER AND BRACE

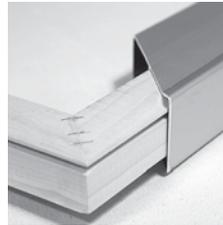

INSERT CORNER SUPPORT

4.

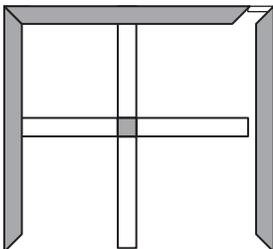


INSTALL CORNER SUPPORT AND JOIN THE TOP PERIMETER AND BRACE

WE RECOMMEND USING A RUBBER MALLET TO ASSEMBLE.




YOUR HAND IS NOT A HAMMER.

5.

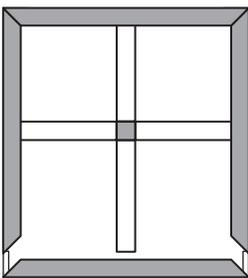


INSTALL CORNER SUPPORTS AT BOTH ENDS OF THE BOTTOM PERIMETER AND WORK THE CORNER SUPPORTS IN A LITTLE AT A TIME FROM BOTH SIDE UNTIL THE PERIMETER CAN BE INSERTED INTO THE BRACE

6.

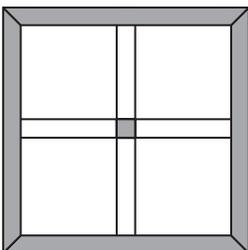

CHECK SQUARE - MEASURE CORNER TO CORNER.

7.

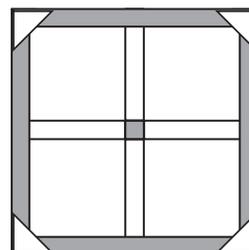

STAPLE CORNER GUSSETS IN PLACE TO MAINTAIN SQUARE WHILE STRETCHING CANVAS. REMOVE GUSSETS WHEN FINISHING CORNER.